HOW TO USE

(While the design of the clock differs depending on the model, the method of operation is the same.)

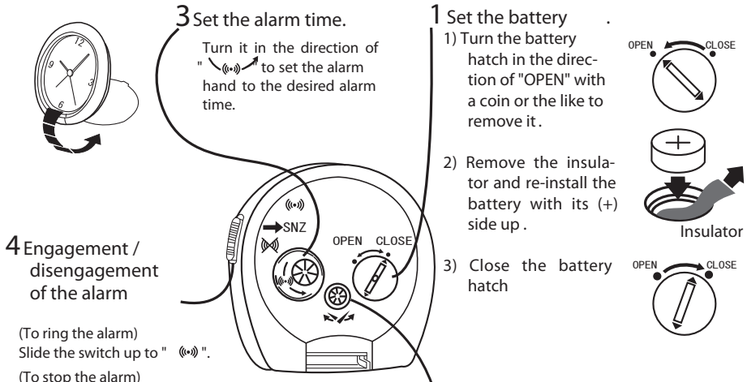
3 Set the alarm time.
Turn it in the direction of " " to set the alarm hand to the desired alarm time.
1 Set the battery .
1) Turn the battery hatch in the direction of "OPEN" with a coin or the like to remove it .
2) Remove the insulator and re-install the battery with its (+) side up .
3) Close the battery hatch
OPEN CLOSE
Insulator
4 Engagement / disengagement of the alarm
SNZ
OPEN CLOSE
2 Set the time .
Turn it clockwise or counter-clockwise with fingers .

(To ring the alarm)
Slide the switch up to " ".

(To stop the alarm)
Follow either of the two proocedures below :

- To stop the alarm and ring it again after a few minutes .
  Press the switch in the direction of " SNZ ".
  (Snooze function)
- To stop and disengage the alarm
  Slide the switch down to " ".

NOTES ON THE ALARM

- After stopped by pressing the switch **4** in the direction of " SNZ", the alarm will ring again in a few minutes .
  This is called the "snooze" function, and can be used repeatedly up to about 40 minutes. It is useful for preventing oversleep .
- Due to the mechanism of the clock, the alarm may not start ringing exactly at the designated time. It starts ringing during the time period between 10 minutes before and 5 minutes after the designated time .
  (For example, if the alarm is set to 7:00, it will start ringing between 6:50 and 7:05.)

HOW TO USE THE WORLD TIME BEZEL

(If you are in Japan)
Turn the bezel to set "TOKYO" to the current time of the 24 hour scale on the dial. The numeral on the 24-hour scale that aligns with each city mark on the bezel indicates the current time of the corresponding city .

＊The time differences and use of daylight saving time in each area are subject to change according to the governments of the respective countries or regions.

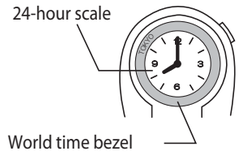

NOTES ON THE BATTERY

⚠ WARNING

(1) If the button type battery is removed from the clock, keep it out of the reach of children. If a child swallows it, consult a doctor immediately.
(2) Do not short-circuit, tamper with or heat the battery, or do not expose it to fire as alkaline solution contained in the battery may leak and get in your eye, or the battery may generate an intense heat or explode.
(3) If your skin or clothes are exposed to the alkaline solution leaking from the battery, rinse it with clean water. If the solution gets in your eye, rinse it with clean water and consult a doctor immediately for proper treatment.

⚠ CAUTION

Be sure to observe the following. Otherwise, battery leakage may result or the battery may explode, causing a malfunction of the clock or injuries to you.

(1) When installing the battery, check that the (+) and (-) sides are properly positioned.
(2) For battery replacement, request the batteries for exclusive use with the SEIKO clocks, and be sure to have all the batteries replaced with new ones at a time.
(3) The battery is not rechargeable, and do not recharge it. Otherwise, battery leakage or damage to the battery may result.
(4) Do not apply solder to the battery.
(5) Do not keep the clock in a place where it is exposed to direct sunlight, extremely high temperatures, or high humidity.
(6) If the clock stops operating or if you will not use it for a long time, remove the battery from the clock.
(7) The battery in your clock may run down in less than the specified period after the date of purchase, as it is a monitor battery which is inserted at the factory to check the function and performance of the clock.

SEIKO

目ざまし時計

取扱説明書

このたびはセイコークロック商品をお買い上げいただき、ありがとうございました。
ご使用の前にこの取扱説明書をよくお読みの上、正しくご愛用くださいますようお願い申し上げます。なお、この取扱説明書はお手元に保存し、必要に応じてご覧ください。

発売元
セイコークロック株式会社
〒105-8469　東京都港区芝浦１－２－１　シーバンスN館
Ⓣ
説明書番号　FQQ-006K

SPECIFICATIONS

- Loss/gain(monthly rate):±20 seconds at normal temperature range (+5℃～+35℃)
- Operational temperature range : -10℃～+50℃
- Battery: Button type alkaline battery LR44 (SEIKO SB-F9) 1 pc.
- Accuracy of the alarm:－10 minutes～＋5minutes
- Battery life : Approx. 1 years

*The above specifications are subject to change without prior notice, for product improvement.

GUARANTEE AND AFTER-SALES SERVICING

- This clock is guaranteed by the manufacturer.
  The content of guarantee is described in the certificate of guarantee attached to the clock.
- The guarantee and after-sales servicing are valid only in Japan.
- If the clock requires service under guarantee within the guarantee period, take it to the retailer from whom your clock was purchased, together with the certificate of guarantee. The clock will be sent to SEIKO, where repair and adjustment are made without charge.
- Even if the repair is not covered by the guarantee, or even if the guarantee period expires, your clock will be repaired at cost at your request.
- SEIKO makes it a policy to usually keep a stock of spare parts for its clocks for 3 years. In principle, your clock can be reconditioned within this period if used normally. Replacement parts are those which are essential to maintaining the functional integrity of the clock. The number of years that a clock is considered repairable may vary greatly depending on the conditions under which it was used, and normal accuracy may not be achieved in some cases. We recommend, therefore, that you consult the retailer from whom the clock was purchased when having them repair your clock.
- The clock parts or accessories may be replaced with substitutes if the originals are not available.
- To obtain the service, take your clock to the retailer from whom it was purchased, irrespective of whether the guarantee is valid or not.

PLACE OF USE AND CARE OF YOUR CLOCK

■Place of use
Do not use the clock under the following conditions.

- In a temperature below -10℃.
- In a temperature over +50℃.
  For example, under direct sunlight, near a heater or fire.
- Humid places such as bathroom.
- Places where the clock is exposed to strong magnetism or vibration.

■Care of your clock
Daily care

- When wiping the frame of the clock, use a soft, moisturized cloth.
- If the clock is heavily stained, wipe it with a soft cloth soaked with a diluted water solution of neutral detergent and then wipe it with a dry cloth again.
- Do not use benzine, thinner, polishing powder or brushes to clean the clock.
- Be careful not to expose the clock to insecticide or cosmetic spray.

ご使用方法

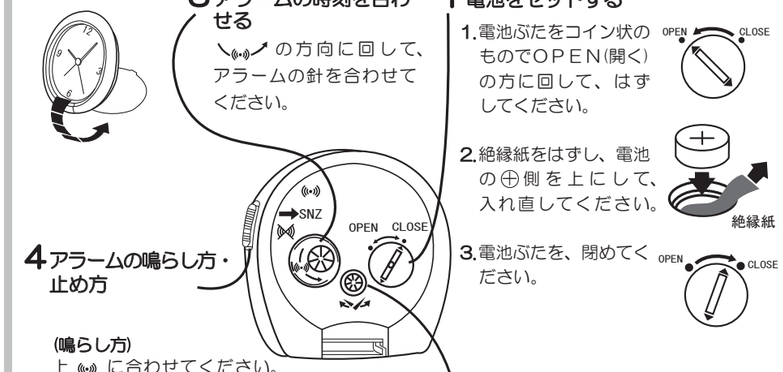

(鳴らし方)
上 に合わせてください。

(止め方)
２通りの方法があります。
●数分後に再び鳴らしたいとき
このスイッチを➡SNZの方へ押してください。
(スヌーズ機能)
●完全に止めたいとき
下 に合わせてください。

アラームについて

●4のスイッチを➡SNZの方へ押してアラームを止めると、数分後に再び鳴りだします。約40分はこの操作を繰り返すことができます。アラームを止めても、数分後に再び鳴りだす機能のことをスヌーズ機能といいます。寝すごし防止にご利用ください。

●機械の構造上、アラームを合わせた時刻と、実際に鳴りだす時刻との間に、多少の時間のずれがあり、アラーム針が示す時刻の10分前から5分過ぎの間に鳴りだします。
(例えば、アラームの時刻を7:00に合わせたときは6時50分から7時5分までの間に鳴りだします。)

世界各地の時刻の見方

(日本国内で時計をご使用の場合)

前面リングのTOKYOを、文字板24時間目盛の現在時刻の位置に合わせます。その時、各地の地名が示す24時間目盛の数字が、その地域でのそれぞれの現在時刻です。
※各地域の時差およびサマータイムは、国または地域の都合により変更される場合があります。

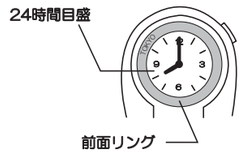

電池について

⚠ 警告

(1)時計に使用しているボタン電池を取りはずした場合は、幼児の手の届かないところへおいてください。万一、お子様が飲み込んだ場合は、ただちに医師と相談してください。
(2)ショート、分解、加熱、火に入れるなどしないでください。アルカリ性溶液がもれて眼に入ったり、発熱、破裂などの原因となります。
(3)万一、アルカリ性溶液が皮膚や衣服に付着した場合にはきれいな水で洗い流し、眼に入ったときはきれいな水で洗った後、直ちに医師の治療を受けてください。

⚠ 注意

下記のことを必ず守ってください。電池の使い方を間違えますと、液もれや破裂などのおそれがあり、機器の故障やけがなどの原因となります。
(1)⊕⊖を正しく入れてください。
(2)電池を交換するときは、全部の電池を新しい指定の電池と交換してください。
(3)この電池は充電式ではないので、充電すると液もれ、破損のおそれがあります。
(4)電池に直接ハンダ付けしないでください。
(5)直射日光・高温・高湿の場所を避けて保管してください。
(6)時計が止まったり、時計を使わないときは、電池をはずしてください。
(7)時計に添付の電池は工場出荷時よりつけられていますので、電池寿命は製品仕様の表示より短いことがあります。

製品仕様

- 精　　度：平均月差±20秒
  (気温5℃から35℃で使用した場合)
- 使用温度範囲：－10℃～＋50℃
- 使 用 電 池：アルカリボタン電池　1個
  SEIKO SB-F9
  (電池上の表示 LR44)
- アラーム精度：－10分～＋5分
- 電 池 寿 命：約1年

＊上記の製品仕様は、改良のため予告なく変更する場合があります。

保証・アフターサービス

- この時計はメーカー保証です。
  保証の内容については別添の保証書をご覧ください。
  尚、保証書は日本国内のみ有効です。
  また、アフターサービスも海外ではできません。
- 保証期間中の保証規定に基づいた修理品は、お買上店がお預かりし、メーカーが無料で修理いたします。必ず保証書を添えてご依頼ください。
- 保証期間中でも無料修理の対象とならない修理品および保証期間経過後の修理品は、ご希望により有料で修理させていただきます。
- この時計の修理用部品は3年間保有しています。この期間は原則として修理が可能です。
  修理用部品とは製品の機能を維持するために不可欠な時計本体の部品です。
  修理の可能な期間は、ご使用条件により異なります。また修理可能な場合でも元通りの精度にならない場合があります。お買上店とよくご相談ください。
- 修理のとき、部品・その他の付属品は、一部代替部品を使用させていただくこともありますので、ご了承ください。
- 保証期間中・経過後とも、修理品はお客様がお買上店にお持込みいただきます。修理を依頼されるときはお買上店にご持参ください。
- 保証期間外、もしくは無料修理の対象とならない修理の際は、本体の修理料金のほか、取扱店と修理工場との間の往復運賃、諸掛り費用をお客様にご負担いただきます。代金が標準小売価格を上回る場合があります。
- ご不明の点は下記お客様センターにお問い合わせください。

本製品、ならびにアフターサービスなどにつきましてご不明なことがございましたら、製品本体の裏面または底面に表示してあります製品番号(型番)をご確認のうえ、セイコークロック(株)お客様センターにお問い合わせください。
（例：AMOOO、PWOOO、KROOOなど）

フリーダイヤル
お客様センター　0120-315-474
http://www.seiko-clock.co.jp

使用場所・お手入れ方法

■使用場所
つぎのような所では、使わないでください。
●温度が－10℃（氷点下10度）以下になる所
●温度が＋50℃（50度）以上になる所
例えば、直射日光が当たる所、暖房器具などの熱風や熱が当たる所、そのほか火気に近い所
●浴室など湿気の多い所
●強い磁気や振動がある所

■お手入れ方法
日常の手入れの仕方
●わくをふくときは、湿ったやわらかい布でふいてください。
●よごれがひどいときは、水でうすめた中性洗剤を少量、やわらかい布につけてふき、ふいた後で乾ぶきしてください。
●ベンジン、シンナー、アルコール、ミガキ粉、各種ブラシなどは使わないでください。
●殺虫剤、ヘアスプレーなどもかからないようにしてください。